


Installation

dai3042us

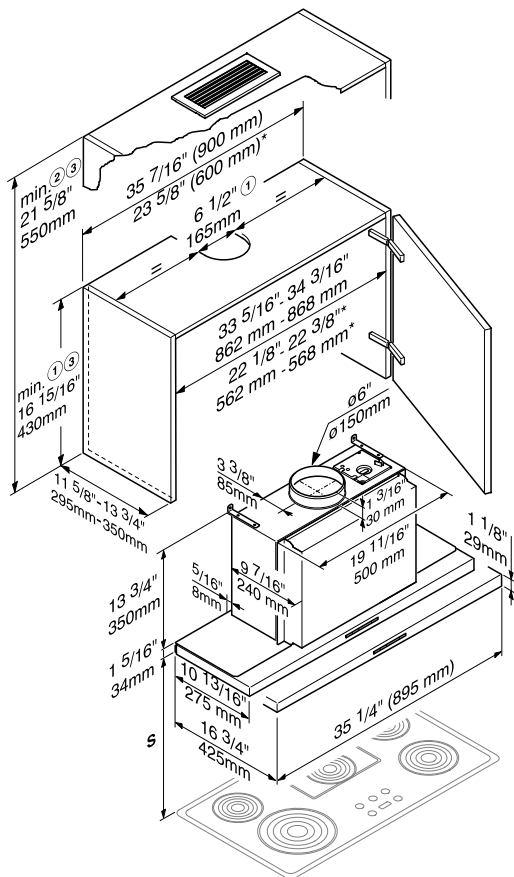

DA 3496

- ① Vented mode; consider accessories when measuring cabinet height and cut-outs (e.g. muffler).
- ② Recirculation mode with conversion kit DUU 151.
- ③ For Canada: When installing the ventilation hood with a DAR 3000 drop-down frame, make sure that you note the different wall unit height (please refer to the dimensions given in the DAR 3000 Installation diagram).

* The ventilation hood can also be installed in a 23 5/8" (600 mm) wide unit (a DAR 3000 drop-down frame cannot be used in this instance).